

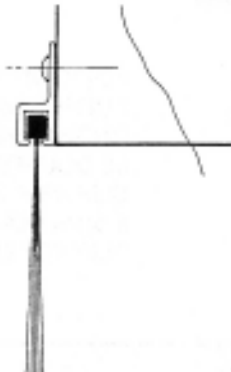
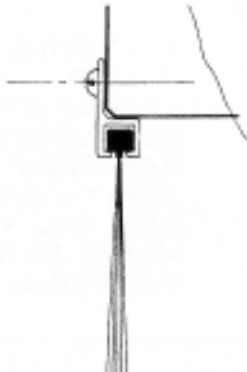






GENERAL INSTRUCTIONS FOR FITTING RIGID & FLEXIBLE SPINE SUPPRESSANT WITH CLIPS & TRACKS

 <p>METAL MUDGUARD CLIP-HA-1 4.8mm dia rivet</p>	 <p>MOULDED SPRAY SUPPRESSANT RECESS</p> <p>DYNAGUARD PLASTIC MUDGUARD CLIP-HA-1 4.8mm dia rivet</p>
 <p>VEHICLE BODY TRACK -H 4.8mm dia rivet or self tapping screw</p>	 <p>VEHICLE BODY TRACK -H 4.8mm dia rivet or self tapping screw</p>
 <p>METAL MUDGUARD CLIP-FA-1 4.8mm dia rivet</p>	 <p>VEHICLE BODY TRACK -F 4.8mm dia rivet or self tapping screw</p>

CLIP INSTALLATION Space clips at approx. 200mm intervals. Lightly crimp one clip or use a locking screw to secure filament.

TRACK INSTALLATION Secure track at 200mm intervals. Lightly crimp track or use a locking screw to secure filament.

